




I-560 PCIe 2S Serial Card
Ordering Code: IC-560
Part No: IE-K10-5220-00-00012
DoorNet Tech P/N: 772307

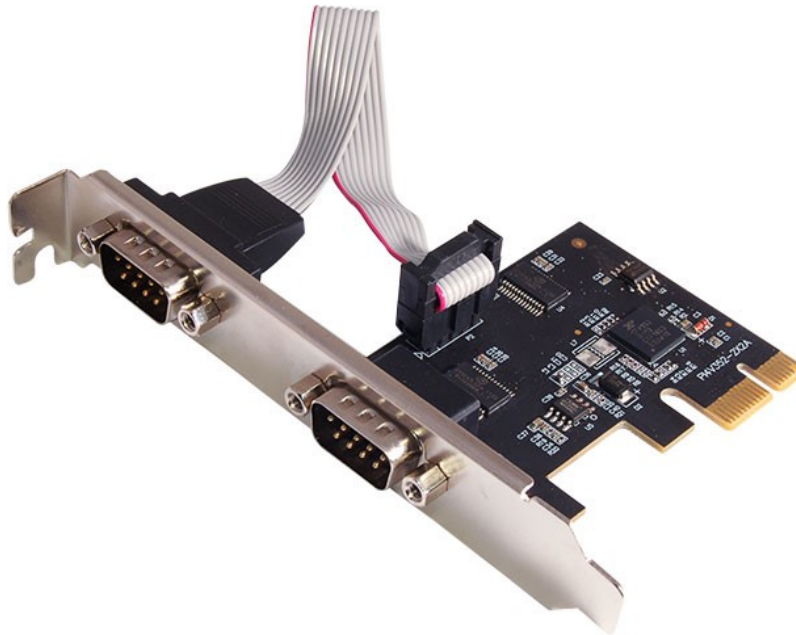


RS-232 I/O series, a line of PCI Express Multi-port Serial Communication Board, is designed to meet PCI Express Base Specification V2.0. It can be installed in virtually any available PC system and compatible with all major operating systems.

Users do not need to manually set jumpers to configure I/O addresses and IRQ locations.

This board offer independent serial ports for connecting terminals, modems, printers, scanners, cash registers, bar code readers, keypads, numeric displays, electrical scales, data acquisition equipment, and other serial devices for the PC and compatible systems. This board offers a reliable and high performance solution for serial multi-port communications.



ST-LAB ISRAEL | 08-9791383 | WWW.ST-LAB.CO.IL

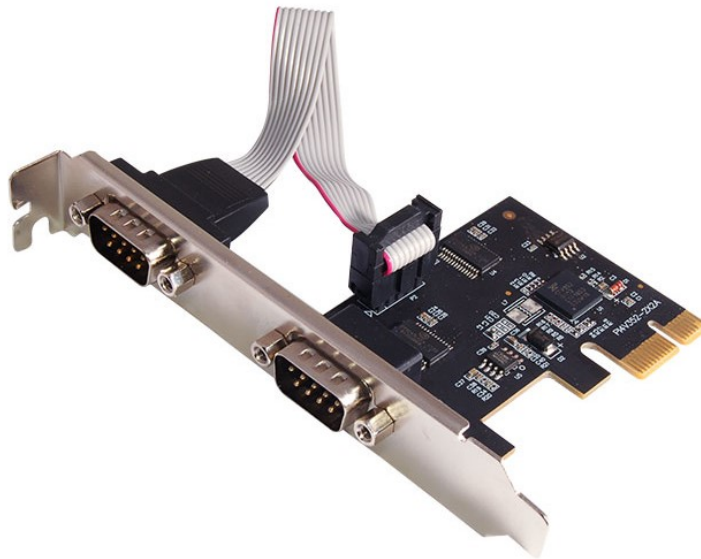

Specification:

- Compliant with PCIe 2.0 Gen 1
- Serial data transfer rate up to 230400bps
- Supports 2 x UART serial port
- Global interrupt status register for both UARTs
- 256-byte TX and RX FIFOs
- PCI-Express x1
- DB9 male serial connectors

System Requirements

- Windows XP/Vista /7/8.x/10 32/64 bit
- Linux 2.6.32 or later

Package Contents

- 1 x PCIe Serial Card
- 1 x User's Manual